

# **Technical Sheet For** Multifunctional Actuator 8 Fold 10A

ILE-KNX-D00-MA08.10



## The worldwide STANDARD for home and building control

## **CHARACTERISTICS**

The device can set max. 8 ch switch outputs, 4 ch AC curtain outputs. 2 ch DC curtain outputs, 2 ch fan control outputs or 2 ch valve control outputs. The output requirements are configured via parameter.

- •Switch output: connect some electrical loads, such as lighting, sockets. All channels have the function of general switch, staircase lighting, light flashing and switch delay, scene, operation hours counter, logic and force operation;
- •Curtain output(AC/DC): connect with motor blinds, awnings, roller blinds, vertical blind, etc. With operating shutter and slat adjustment, automatic sun protection, scene and safety operating etc.;
- •Fan control: support up to three level fan speed, with general operation, forced operation, Auto. operation and status response etc.;
- •Valve control: connect with 2pipes or 4pipes system, support three valve control types: 3point,open and close, continuous,PWM and 2state-ON/OFF, and support disable/enable HEAT and COOL, valve status response, valve purge etc.
- •KNX Data Secure

### **PARAMETERS**

Connection

Power supply	Bus voltage	21-30V DC,	via the KNX bus

Bus current <10mA/24V, 9mA/30V

Bus consumption <270mW Capacitor <22mA

Output Un rated voltage 230V AC(50/60Hz)

> In rated current 10A

192A/1.2ms Inrush current

Mechanical endurance

Electrical endurance >5 x10<sup>4</sup> (Resistive load)

KNX Bus connection terminals

Outputs Screw terminals,

Wire Range 0.2-2.5mm<sup>2</sup>

Torque 0.4N-m

Operation For assigning the physical address Programming button and Display and Red LED

> Green LED flashing For displaying application layer

running normally

Manual button Switch output

Output LED

Man./Auto. button Switch the Man. and Auto. mode

Indicate the output states


Man./Auto. LED Indicate the Man./Auto. mode state Temperature Operation -5 °C ... + 45 °C

> -25 °C ... + 55 °C Storage - 25 °C ... + 70 °C Transport

**Environment** Humidity <93%, except dewing

Mounting On 35mm mounting rail

#### **DIMENSIONS**

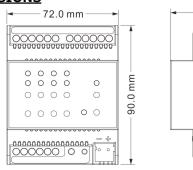


Model	Dimension	Weight
ILE-KNX-D00-MA08.10	72 × 90 × 64.1mm	0.30kg

64 0 mm

П

#### **DESCRIPTIONS**

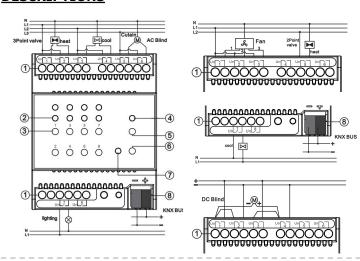

- ①Output terminals: the above icons show the wiring method for per control output.
- 23 Manual operation buttons and status indicating LED for outputs.

The LED above the button indicates the corresponding output of state.

For switch, the LED on is closed, off is open.

For curtain AC/DC, to move the curtain via a long operation, and slat adj./stop via a short operation. When curtain is running, the LED will flash; If both of blinds and slat arrive at min. or max. position, the LED will be on. (For curtain DC, the button and LED (3)&(4) are not used.)

For fan control, button&LED(1) are used to control and indicate for fan speed1; button&LED(2) are used for fan speed2; button& LED(3) are used for fan speed3. Via any button can switch off the fan in fan ON. And the button&LED(4) are not used.

For valve control, In 2pipes button&LED(1) are used to switch on/off and indicate for valve, and button&LED(2) are not used. In 4pipes button&LED(1) are used to switch on/off and indicate for heat valve and button&LED(3) is for cool valve, and button and LED(2)&(4) are not used.

- 45Man./Auto. operation switch button and status indicating LED 67 Programming button and LED ®KNX bus terminal
- Reset the device to the factory configuration: press the programming button and hold for 4 seconds then release, repeat the operation for 4 times, and the interval between each operation is less than 3 seconds

## **INSTALLATION FIGURE**

The devices are suitable for installation on the distribution boards with 35mm DIN rail which complies with DIN EN 60715 in order to facilitate quick installation of the device. Must ensure that the device operation, test, detecting, maintenance correctly.

#### IMPORTANT INFORMATION

Installation and commissioning of the device may only be carried out by trained electricians. The relevant standards, directives, regulations and instructions must be observed when planning and implementing the electrical installation.

- •Protect the device against moisture, dirt and damage during transport, storage and operation!
- •Do not operate the device outside the specified technical data (e.g. temperature range)!
- •The device may only be operated in closed enclosures (e.g. distribution boards).

Should the device become soiled, it may be cleaned with a dry cloth. If this does not

suffice, a cloth lightly moistened with soap solution may be used. On no account should caustic agents or solvents be used.